



THE ORIGINAL ZEROLL®

The Original Zeroll® Ice Cream Scoop, with a heat-conductive fluid in the handle, uses the heat from your hand for easy scooping and instant release. Available in six sizes.



THE ZEROLON® SCOOP

The Zerolon® Ice Cream Scoop is Hard-Coat Anodized and Sealed with Teflon®. Available in six sizes.

INSTRUCTIONS FOR CARE & USE

1. Before first use, hand wash, rinse with water and towel dry.
DO NOT PUT IN DISHWASHER.
2. Grasp scoop near the bowl. Draw the scoop toward you at an angle of about 45 degrees.
3. Turn the scoop, lifting portion out of container and press against dish or cone to release the ice cream instantly.
4. After use, hand wash, rinse with water and towel dry.



WARNING

DO NOT PLACE IN DISHWASHER.

DO NOT EXPOSE TO TEMPERATURES ABOVE 140°F/60°C.



THE ORIGINAL TUBMATE™

The Original TubMate™ Spade is an ideal solution for leveling tubs, hand packing and hand mixing. The TubMate™ has been re-designed for longer life. The blade has been designed to match the radius of ice cream cartons for faster, cleaner knock-downs.



ZEROLON® TUBMATE™

The Zerolon TubMate™ Spade is Hard-Coat Anodized and sealed with Teflon®.

INSTRUCTIONS FOR CARE & USE

1. Before first use, hand wash, rinse with water and towel dry.
DO NOT PUT IN DISHWASHER.
2. Scrape sides of carton clean with the TubMate™.
3. Level top of ice cream to increase yield and help prevent ice crystals.
4. After use, hand wash, rinse with water and towel dry.



WARNING

DO NOT PLACE IN DISHWASHER.

DO NOT EXPOSE TO TEMPERATURES ABOVE 140°F/60°C.



THE ORIGINAL ZELATO®

All of the quality, design and function, that have made Zeroll® stand the test of time, are engineered into the NEW Original Zelato® Spade. The Zelato® is an ideal solution for serving Gelato. Also available in Zerolon®.

INSTRUCTIONS FOR CARE & USE

1. Before first use, hand wash, rinse with water and towel dry.

DO NOT PUT IN DISHWASHER.

2. Hold the Zelato® handle comfortably in the palm of your right or left hand.

3. Place the bowl across the surface of the Gelato at a 45 degree angle and draw toward you.

4. When you have a full portion, turn and lift the portion from the pan.

5. After use, hand wash, rinse with water and towel dry.



WARNING

DO NOT PLACE IN DISHWASHER.

DO NOT EXPOSE TO TEMPERATURES ABOVE 140°F/60°C.



UNIVERSAL EZ DISHER

The Universal EZ Disher is now EZ'R! NEW color-coded handles makes size identification quicker and EZ'r. This unique design has no springs to break or replace. Approved by NSF and available in 13 different sizes.

INSTRUCTIONS FOR CARE & USE

1. Hold the EZ handle comfortably in the palm of your right or left hand.

2. Place the bowl across the surface of the food at a 45 degree angle and draw toward you.

3. When the bowl is full, turn the disher and lift the portion from the pan or container.

4. Turn the bowl slightly upward to help hold the product in the bowl.

5. Slightly turn the bowl over and squeeze lightly with hand or thumb action for fast release.

6. After use, hand wash, rinse with water and towel dry.
(The EZ Disher is Dishwasher Safe)



“Nothing Else Works Like A Zeroll®”