




Industries, Inc.

1095
DOOR CLOSER
INSTRUCTION SHEET

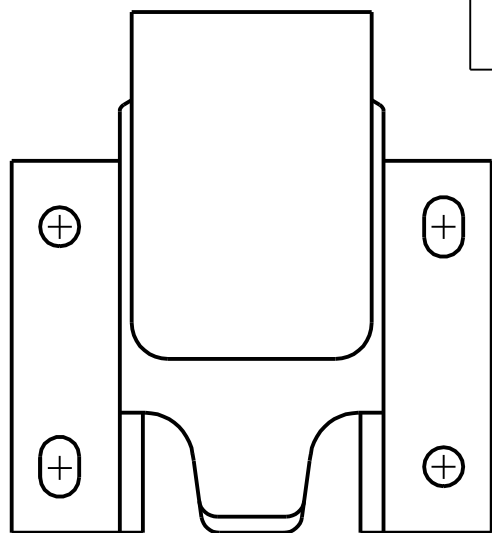


1. WITH DOOR CLOSED, MATCH MOUNTING TEMPLATE
DOOR LINE WITH UPPER DOOR EDGE.

2. CENTER PUNCH SLOTTED HOLES ONLY.

3. DRILL CENTER PUNCHED HOLES FOR SCREWS.

4. FASTEN MOUNTING BRACKET AND HOOK USING
SCREWS.

DOOR LINE

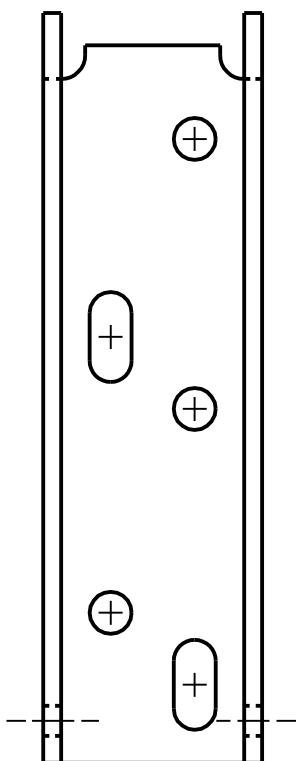

5. WITH DOOR OPEN, SLIDE DOOR CLOSER BODY TABS
OVER MOUNTING BRACKETS UPPER TABS, PULLING
BODY DOWNWARD OVER THE MOUNTING PLATE WITH
A GENTLE PRESSURE UNTIL IT STOPS. DO NOT
FULLY SEAT BODY INTO ASSEMBLED POSITION AT
THIS TIME.

6. ACTIVATE LEVER ARM OF DOOR CLOSER BY PULLING
ARM INTO DOWN POSITION AS SEEN IN FIGURE "A".

7. CLOSE DOOR SLOWLY, ROLLER SHOULD JUST CLEAR
HOOKS OUTER LIP. (SEE FIGURE "A")

8. WHEN PROPERLY ADJUSTED, PUNCH AND DRILL
REMAINING HOOK AND BRACKET HOLES, FASTEN
SECURELY AND ASSEMBLE BODY INTO FULLY
SEATED POSITION.

FIGURE "A"

